

EMERSON	485, 657, 620, 619, 664, 648 638, 311, 315, 491, 577, 420
ENVISION	403,636,300,307,392,527,554
FUNAI	336, 311, 367, 425, 440, 455 577, 580
GPX	575, 715, 714, 713, 712, 711
HAIER	693, 628, 692, 365, 387, 451 348, 360, 533, 587
JENSEN	460, 300, 392
JVC	604, 705, 407, 659, 624, 363 354, 338
LODGENET	421, 423, 447, 509, 544
MAGNAVOX	655,548,580,372,571,554,311
NEC	300, 326, 392, 405, 512, 431 434, 452, 510, 563
PANASONIC	663, 415, 701, 617, 645, 648
PHILIPS-MAGNAVOX	349, 364, 464, 582, 597
PIONEER	332, 392, 443, 300, 400, 410 434, 539, 573
PROSCAN	450, 669, 717, 638, 659, 420 466, 581, 485, 548, 317, 426
RCA	310,374,490,466,426,591,510 476,449,450,350,519,468
SANSUI	491,621,637,419,316,401,666 667,668,683,684,685,647
SCEPTRE	543, 517, 380, 628, 545
SEIKI	396, 656, 687
SIGNATURE	421, 423, 453, 509
SKYWORTH	351, 350, 697
SPECTRAVISION	465
SUPERSONIC	404, 319, 575
SYLVANIA	401,485,329,580,525,311,315 318,368,369,300,324,367,370 376,392,431,433,577
SYMPHONIC	401,580,311,302,367,455,577
VIEWSONIC	527,388,403,626,339,443,530,556
WESTINGHOUSE	676,677,659,503,436,451,308,461
WHITE-WESTINGHOUSE	621,344,367,409,411,413,577

MED-PAT®

WP-1 Universal Remote Instruction and Use Manual



WP-1 Universal Remote Control Stay Clean and Connected.

Any questions or any issues please call 1-800-626-0410.

Med-Pat Inc. 31 Riordan Pl Shrewsbury, NJ 07702

Follow us on social media:

FaceBook Med-Pat
Instagram @medpat_inc
LinkedIn: Med-Pat, Inc.

Find our Amazon store: Med-Pat Solutions

Water Proof and Worry Proof.

FOR COMPLETE BRAND CODE
LISTING SCAN OUR QR CODE



Battery Installation

1. To open the battery cover, slide the compartment down and insert two(2) AA batteries (batteries not included).
2. Slide compartment back to close cover.

WP-1 Setup

1. Direct Code Entry:
With the cable box on, hold "SET" and "OK" until the LED stays on.
Enter the code for your TV/STB brand from the list.
The LED turns off if successful.
2. Code Mode Search:
Turn on the TV.
Stand about 5 feet away and point the remote at the TV center(once remote is set up this step no longer necessary).
Press and hold the "SET" button until the LED blinks, which then starts the code search.
Once the TV turns off, release the "SET" button.

Function Buttons on WP-1 Universal Remote Control

- POWER: Turn TV, STB, or HDTV on/off.
MUTE: Mute/restore sound.
PREV.CH.: Return to last channel.
SLEEP: Enter sleep mode for shutdown.
VOL+: Increases volume (press and hold for continuous increase).
VOL-:Decreases volume (press and hold for continuous decrease).
CH+: Channel up (press and hold for continuous channel up).
CH-: Channel down (press and hold for continuous channel down).

Switch WP-1 Remote to Control TV Only:

- To control only TV, press and hold "SET" + "CBL" for 3 seconds.
The CH buttons will work as your TV remote.
Repeat to switch back.

Reset the Remote:

Press and hold "SET" + "CC" for 3 seconds. Indicator light flashes three times, indicating successful factory reset.

WP-1 remote is compatible with a majority of TV/STB/HDTV brands and models.

WP-1 REMOTE CODE LIST

TV BRAND CODE LIST

Code list of popular TV brands in America

HISENSE	694,420,703,695,446,629, 456,451,630,300,348,562
HISENSE(ROKU TV)	703
INSIGNIA	491,329,716,695,460,311,721 342,361,365,459,696,493,528 561,576,580,602,603,615
LG	680,300,644,496,438,389,392
PHILIPS	313,702,700,655,704,683 315,364,537,554
SAMSUNG	660,661,506
SANYO	387,623,491,622
SHARP	679,630,703,678,501,695,674
SHARP(ROKUTV)	703,678
SHARP TRINITRON	546
SONY	380,662,628,596,437,484
TCL	695,675,681,658,698
TCL(ROKU TV)	695
TOSHIBA	399,645,385,482,316,326,357,415 431,434,438,590,593,605
VIZIO	651,649,648,720,724,690,691 689,652,650,653

Other Widely Used Brands

AFFINITY	466, 468
AIWA	333, 367, 577, 583
AUDIOVOX	455, 474, 540, 541, 566
CRAIG	710, 709, 440, 455
DAEWOO	414, 300, 343, 352, 358, 371 392, 393, 394, 405, 409, 411 413, 440, 454, 558, 574
DURABRAND	329,311,360,365,401,460,462,609
DYNEX	499, 627, 500, 725, 329, 491
ELEMENT	638, 382, 420, 632, 630, 470 642, 664, 665, 680